



## Contents

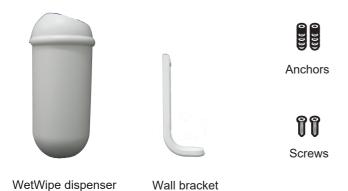

## Instructions

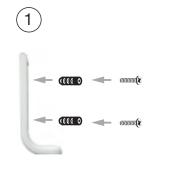

Position bracket on wall. Secure anchors and screws into wall



Attach dispenser to bracket



Cut 'V' shaped hole in wipe refill bag top



Remove dispenser lid and insert wipe refill. Pull wipe from centre of roll through lid hole. Replace lid.